


User Manual HLV8 Series

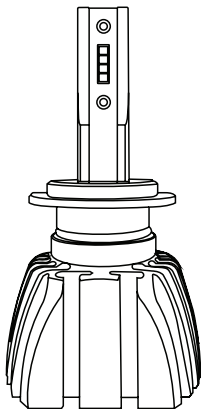

Warranty

A 5-year warranty is given from the date of purchase to the original purchaser on halogen replacement bulbs. Warranty is for replacement and covers manufacturing faults only. Labor costs are not covered by warranty. Any damage caused from improper installation, physical damage, or connecting to voltages other than 12–24 VDC (halogen replacements) or an OEM ballast (HID replacements) will not be covered.

Safety and Notes

- Product should be installed by a qualified technician where possible.
- LED headlight replacements are only water-resistant when used in an enclosed headlight housing assembly. Do not expose the chip side of the light to water directly or submerge the bulbs.
- Adequate ventilation is necessary for good heat dissipation, which will prolong the lifespan of the bulbs.
- Check voltage of the vehicle to be sure it complies with the operating voltage of this product (12–24 VDC for halogen replacements).
- Ensure all wire connections and polarities are correct before applying power to avoid damage to the bulbs.
- If a fault occurs, contact Super Bright LEDs to initiate a return. Do not attempt to repair this product by yourself.
- For HID replacement bulbs, ensure the existing ballast is working and still installed properly as it is required for operation. Note: These bulbs will not work with Marelli Automotive Lighting part numbers 1 307 329 153 and 1 307 329 115 (as well as any numbers these supersede).

Installation



1. Remove the old light bulb from the headlight housing.
2. For models with a removable collar (e.g. H4s), remove the collar from the light (no tools required) and mount the collar in the headlight housing.
3. Install LED lamp in correct direction.
Note: Lighting pattern is adjustable by rotating lamp body on removable collar models only.
4. Connect plug to wiring harness.
5. If clearance allows, reinstall dust cap on rear of headlight housing if applicable.