 


Important: Read all instructions prior to installation.

 
200W High Powered Area Light

Bracket Assembly


HPAL-X

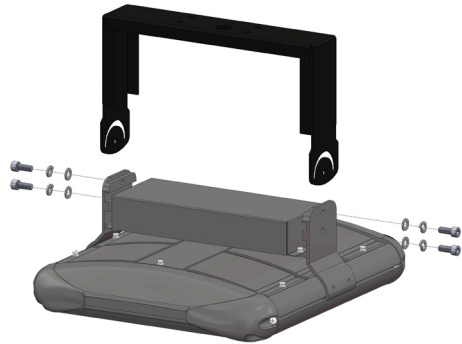


HPAL-SM

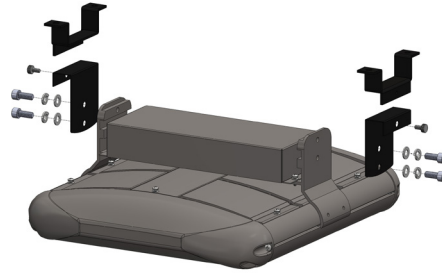


HPAL-UB

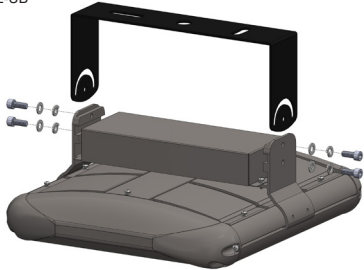 


HPAL-UB-IH

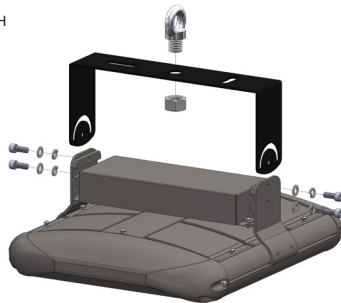 

HPAL-FA

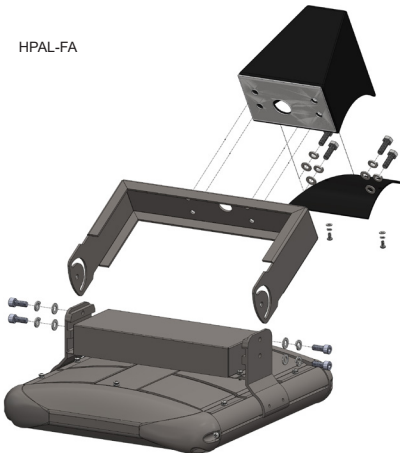 

HPAL-SF

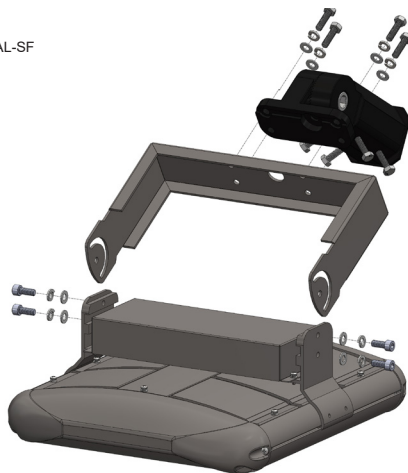 

superbrightleds.com

High Powered Area Light

HPAL-NW200-BP9



Installation Manual



200W High Powered Area Light

User Manual

Part Number:

HPAL-NW200-BP9

Included Parts

- 1 - 200 Watt Area Light (HPAL-NW200-BP9)
- 1 - Instructional Sheet
- 1 - Mounting Bracket
- 1 - Hardware

Optional Accessories

- Surface Mount Bracket (HPAL-SM)
- Universal Angle Mount Bracket (HPAL-UB)
- Square Mount Fixed Arm (HPAL-FA)
- Round Pole Slip Fit Bracket (HPAL-SF)
- Eye Bolt and Universal Bracket (HPAL-UB-IH)


Specifications

HPAL-NW200-BP9	
Intensity	22000 lm
Replacement For	650 Watt HID
Total Power Consumption	200 Watts
Operating Voltage Range	100~277 VAC
Beam Angle	90 / 90 degree
Color Temperature	5000 K
CRI	>75
Operating Temperature	-22~113°F (-30~45 °C)
IP Rating	Weatherproof IP66
LED Lifetime	100,000 Hours
Fixture Weight	16.3 lbs (7.4Kg)
Standards and Certifications	ETL / CE / RoHS
Warranty	5 Years

Installation Instructions

1. Remove power prior to installation.
2. Choose mounting method and preassemble light to mounting bracket.
3. Secure fixture with mounting bracket to mounting surface.
4. Connect wiring to power supply. Black to Line, White to Neutral, and Green to Ground.
5. Restore power to circuit to test function then aim fixture.

 Wiring Diagram

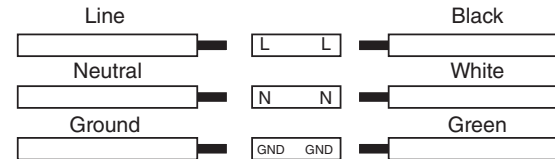

Optional Accessories



HPAL-UB-IH
Universal Angle Mount
Bracket with Eye Bolt



HPAL-UB
Universal Angle Mount



HPAL-FA
Square Mount Fixed Arm Kit



HPAL-SF
Round Pole Slip Fit Kit



HPAL-SM
Surface Mount Brackets