

User Manual




PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION


- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect power and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -30°C to 45°C and to be horizontally mounted with the LEDs facing down.

Unpacking

Thoroughly check the damage to the fixture. Damage to the goods shall be reported to the carrier .

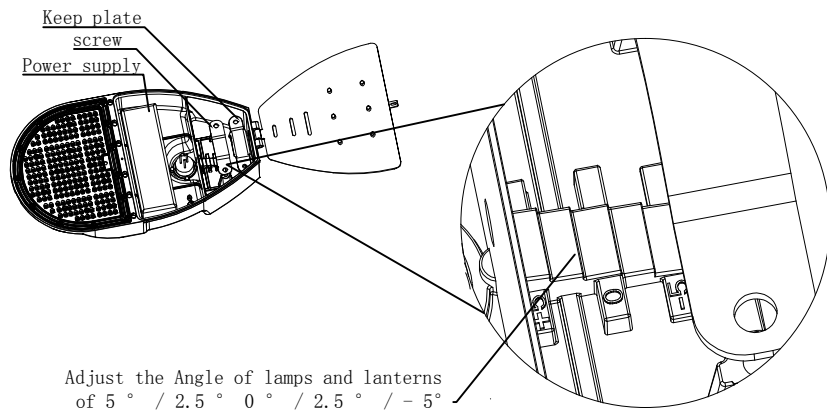

Installation

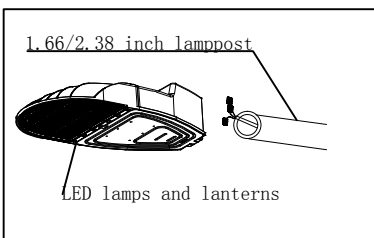

1. With the lower access cover open and the slip-fitter brackets loose, slide the light over the pole/post. Maximum diameter pole/post is 2.5 in. (65 mm) OD.
2. Tighten the slip-fitter brackets to hold the light in place.
3. Connect wiring and close access cover.