

Important: Read all instructions prior to installation.

Field-Selectable CCT/Wattage LED Downlights

Safety and Notes

- Product should be installed and serviced by a certified electrician in accordance with applicable national, state, and local building and electrical codes.
- To reduce the risk of electric shock, ensure that the main power source and circuit breakers are switched off before performing any installation or wiring procedures. Do not use if wiring or light are damaged.
- Avoid looking directly into lamp when illuminated.
- Connect only to indicated voltage and in an appropriate environment to avoid potential damage or personal injury.
- Ensure all mounts are securely attached and will support the weight of the fixture. Failure to properly support fixture may result in damage or injury, for which the manufacturer does not assume responsibility.
- Do not install luminaire near any heat source.
- Always ensure that power is off and the luminaire has cooled before performing any maintenance, cleaning, or adjustments.



Specifications

Environmental Specifications	
Operating Temperature	-4°–113° F (-20°–45° C)
Environmental Rating	suitable for damp locations

Check product label for specific electrical specifications related to installation. Improper installation will void warranty.

Installation

Note: Thermal radiation space and irradiation distance must be ensured. The space between the fixture and any insulation or backing surface should be no less than 3.94 in. (100 mm).

1. Turn supply power to circuit off.
2. Cut hole in ceiling/panel according to size.
3. Set desired wattage and CCT on light.
4. Connect wiring.
5. Fold back spring clamps and place light securely into cutout hole.
6. Reconnect supply power.

Cutout	Diameter
CDL4D	Φ 4.3 in.–5.5 in.
CDL6D	Φ 5.9 in.–7.5 in.
CDL8D	Φ 7.5 in.–9.5 in.
CDL10D	Φ 8.3 in.–10.2 in.

