

Important: Read all instructions prior to installation.

LED Area Light

Safety and Notes

- Product should be installed and serviced by a certified electrician in accordance with applicable national, state, and local building and electrical codes.
- To reduce the risk of electric shock, ensure that the main power source and circuit breakers are switched off before performing any installation or wiring procedures.
- Avoid looking directly into lamp when illuminated.
- Ensure all mounts are securely attached and will support the weight of the fixture. Failure to properly support fixture may result in damage or injury, for which the manufacturer does not assume responsibility.

Specifications


Environmental Specifications	
Operating Temperature	-22°–122° F (-30°–50° C)
IP Rating	IP66

Check product label for specific electrical specifications related to installation.
Improper installation will void warranty.

Installation

1. Remove supply power prior to installation.
2. If using optional mounting method, remove included bracket and attach optional one.
3. Securely mount light and connect wiring.
Note: In some cases, such as with slip-fitter mount, the wiring will need to be connected before mounting.
4. Restore supply power and on mounts that allow for it, adjust angle as desired.

Wiring Diagram

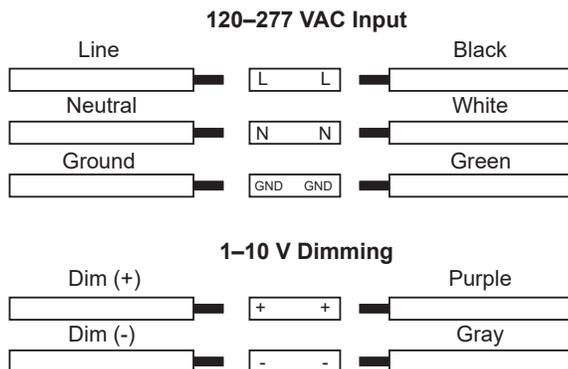

HPAL2-50K450-90

Optional Accessories



HPAL-SM
Surface Mount Bracket Set



HPAL-SF
Adjustable Slip-Fitter Mount
for Round Poles



HPAL-SF-TMB
Slip-Fitter Mount with
Wall Mount Tenon Bracket



HPAL-FA
Fixed Square Pole Mount



HPAL-UB
Alternate U-Bracket Mount



HPAL-UB-IH
Alternate U-Bracket Mount
with Eye Bolt




Important: Read all instructions prior to installation.

HPAL2 Series


LED Area Light

Optional Accessory Installation Diagrams


HPAL-UB / HPAL-UB-IH

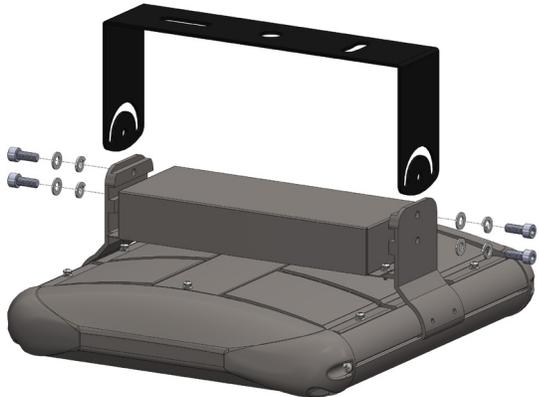

HPAL-SM

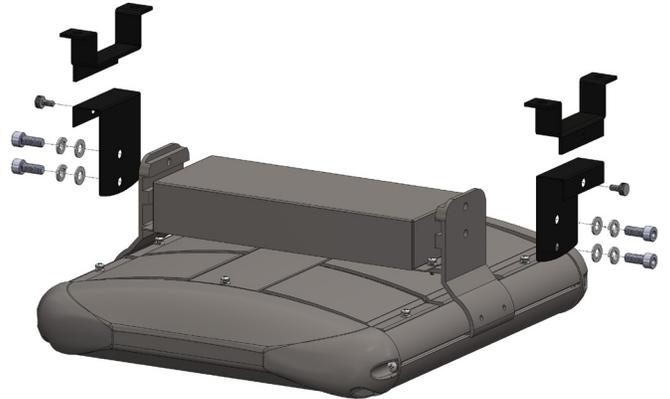

HPAL-FA

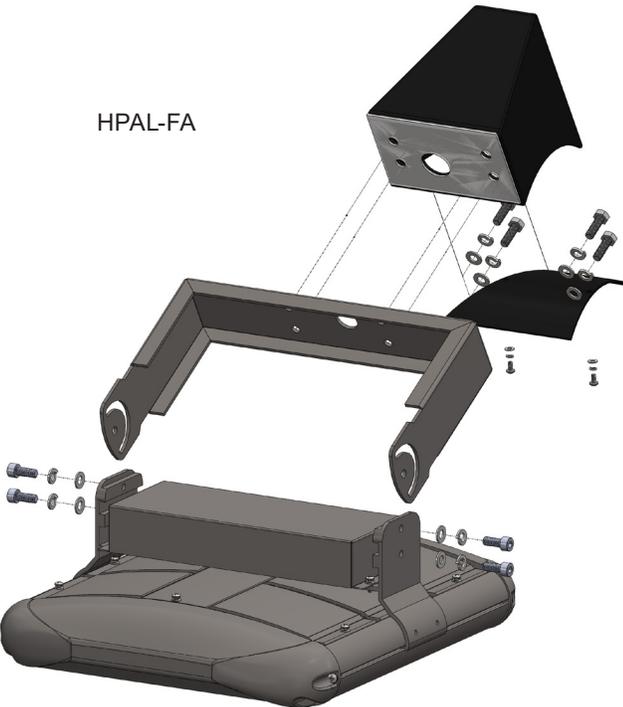

HPAL-SF / HPAL-SF-TMB

