

*Important: Read all instructions prior to installation.*

**Dual-Color LED Headlight Kit**

**Warranty Agreement**

Lifetime Warranty is to the original purchaser. The warranty is for repair or replacement of parts and covers manufacturing faults only. Labor costs are not covered by warranty. Warranty does not cover parts that fail due to physical damage or damage from improper operation or electrical connection. Repair or replacement as provided under this warranty is the exclusive remedy to the customer. Manufacturer is not liable for any incidental or consequential damages related to any breach of this warranty.

**Dual-Color LED Headlight Kit  
User Manual**

x-HLAW Series



9006-HLAW



*Important: Read all instructions prior to installation.*

**Dual-Color LED Headlight Kit**

**Safety and Notes**

- Product should be installed by a qualified technician.
- Ensure adequate ventilation—good heat dissipation prolongs product life.
- Power source must be 9–32 VDC.
- Ensure all wire connections are correctly made before applying power.
- If a fault occurs, contact Super Bright LEDs. Do not attempt to repair product yourself.
- Beam pattern is only adjustable through vehicle’s existing aim adjustment mechanisms.
- Images shown are for illustration purposes and may not directly represent all models.

**Color Selection**

**9003 (H4) and H13**

The low beam is cool, white light. The high beam is warm, amber/yellow light.

**9006 (HB4) and H11**

Switch lights ON/OFF to change color.

**Installation Instructions**

Begin by removing factory light. Due to difference in physical size, existing rear dust cover will need to be modified or discarded where applicable.

*Note: Headlight images below may differ from actual part you receive. Wiring has been removed in some instances for clarity, but does not detach from bulb assembly.*


**9003 (H4)**




**1** Turn mounting flange counterclockwise to release bayonet-style connection and remove flange.




**2** Install mounting flange into headlight housing.

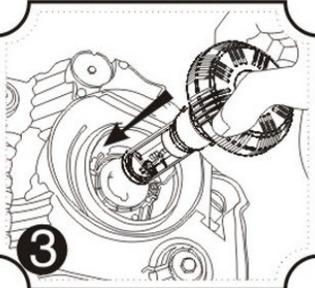

**3** Line up and install light into mounting flange.

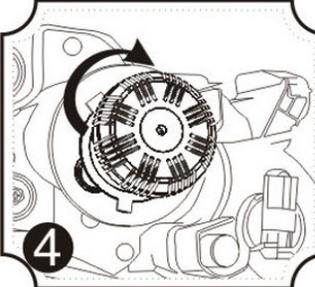


**4** Gently rotate light clockwise until locked in place.

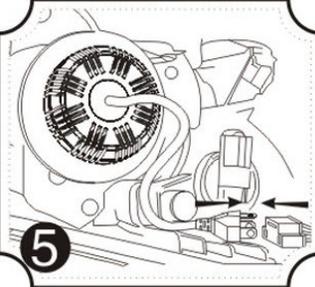


**5** Connect light to vehicle wiring harness.


**9006 (HB4), H11, and H13**

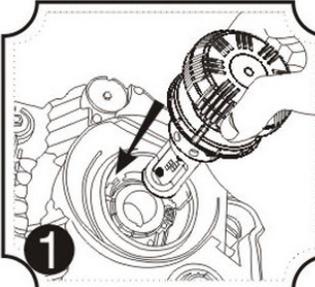

**1** Insert light into housing.

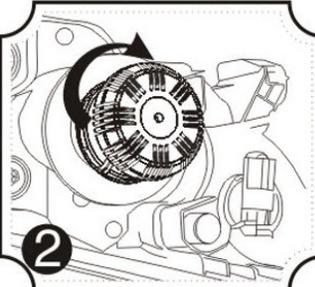

**2** Rotate clockwise to lock in place.

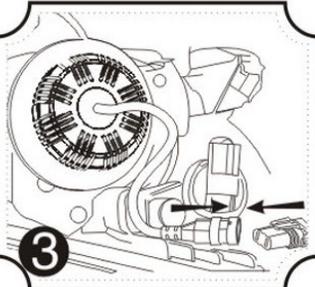

**3** Connect light to vehicle wiring harness.