


Warranty


2-Year Warranty is from date of purchase to the original purchaser. The warranty is for repair or replacement of parts and covers manufacturing faults only. Labor costs are not covered by warranty. The warranty does not cover parts that fail due to physical damage or damage from improper operation or electrical connection. Repair or replacement as provided under this warranty is the exclusive remedy to the customer. Manufacturer is not liable for any incidental or consequential damages related to any breach of this warranty.

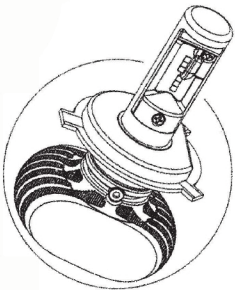

Thank you for using our products.



superbrightleds.com

LED Headlight Kit
User Manual
HLV7 Series

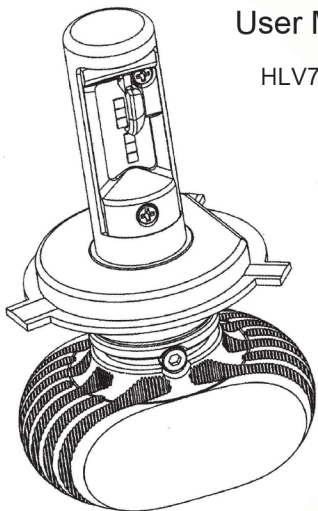


H4/H1

Loosen locking screw with hex key. Turn mounting flange counterclockwise to release bayonet-style connection and remove flange.

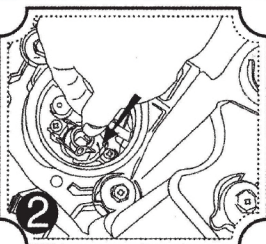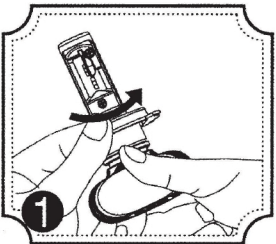



Install mounting flange into headlight housing.

Line up and install light into mounting flange.

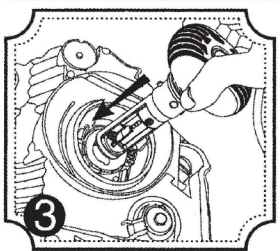

H4/H1



Gently rotate light clockwise until locked in place.

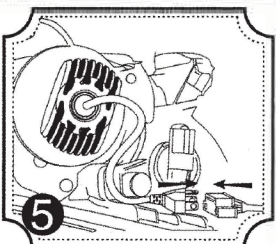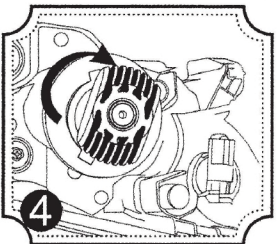

Connect light to vehicle wiring harness. Power on lights to ensure proper installation. If light does not work, reverse polarity of connector.


H11/H13/9006/880/881

Insert light into housing.

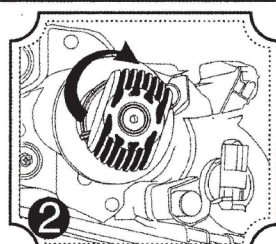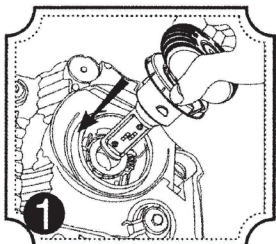

Rotate clockwise to lock in place.

Connect light to vehicle wiring harness. Power on lights to ensure proper installation. If light does not work, reverse polarity of connector.

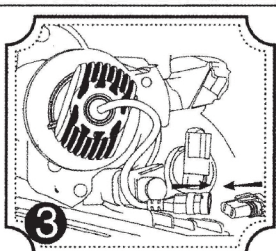

Beam Adjustment

The flange of H13, bulbs is adjustable for better lighting pattern.

