


Waterproof 5 in 1 WiFi LED Controller Model No · WI 5-WP

4. Connect diagram

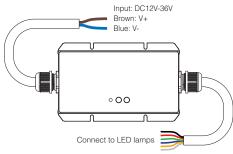

Controller input voltage must be in accordance with the required voltage of LED Strips.



Note: the connection method is different for different output mode Please connect it according to below sheet.

Output Mode (LED Wiring)									
Mode Wire	Black	Red	Green	Blue	White	Yellow			
Single Color	V+	W	W	W	W	W			
Dual White	V+	CW	CW	WW	WW				
RGB	V+	R	G	В					
RGBW	V+	R	G	В	W				
RGB+CCT	V+	R	G	В	CW	WW			

1. Features

This product is a waterproof LED controller suitable for outdoor use. It has brightness, color temperature, RGB, RGBW and RGB+CCT output modes. Built-in WiFi module and 2.4GHz RF communication module. Support Smartphone APP (MiBoxer) and RF Remote controlling.



wireless control



16 Millions of colors to choose



Support amazon alexa and google assistant control

Compatible with 2.4GHz



Color temperature 2700K~6500K

















2. Parameters

Model No.: WL5-WP Input Voltage: DC12V~36V Output: 6A/Channel Total Output Max: 20A

Communication Mode: WiFi-IEEE 802.11b/g/n 2.4GHz RF: 2.4GHz

Remote control distance: 30m

Single Color

Output mode connection diagram

Working Temperature: -20~45°C




Dual White

Output mode connection diagram



RGB

Output mode connection diagram

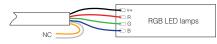


RGBW

Output mode connection diagram




RGB+CCT

Output mode connection diagram

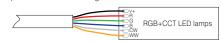



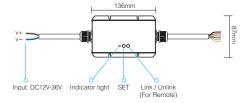

3. Function Instruction

3.1. Switching Output Mode

Short press " SET " button to switch the output mode; The indicating light flickering means switching successfully; Different colors flickering correspond to different output mode, details see below sheet.

Indicating Light Color	Output Mode		
White Light Blinking Quickly	Single Color Mode		
Yellow Light Blinking Quickly	Dual White Mode		
Red Light Blinking Quickly	RGB Mode		
Green Light Blinking Quickly	RGBW Mode		
Blue Light Blinking Quickly	RGB+CCT Mode		

5. RF Remote Link / Unlink

- Link: 1. Short press the " Link/Unlink " button once on the LED controller(or switch off the controller power. After 10 seconds, switch on again). The indicator light flashes red and green alternately.
 - 2. Short press Link/Unlink button on the remote (i.e. " | " or " ON ") 3 times within 3 seconds. The green light flashing 3 times slowly means linking successfully.

Unlink: Long press " Link/Unlink " button on the LED controller for 3 seconds. The red light flashing 10 times quickly means unlink successfully. (Or follow the unlinking steps on the remote instruction.)

Note:

Remote controller need to be purchased separately. The remote linking and unlinking method, please see details on remote instruction.

Compatible with these remote controls (Purchased separately)




00000

3.2. Signal transmitting

One lighting fixture can transmit the signals from the remote control to another lighting fixture within 30m, as long as there is a lighting fixture within 30m, the remote control distance can

3.3. Modes synchronization

Different lighting fixture can work synchronously when they are started at different times, controlled by the same remote. under same dynamic mode and within 30m distance.

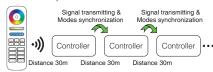

3.4. Dynamic Mode Sheet

Note: only suitable for RGB/RGBW/RGB+CCT output mode.

Number	Dynamic Mode	Brightness / Saturation / Speed	
1	Mardi gras		
2	Automatic color change		
3	Sam		
4	Gemstone		
5	Twilight	Adjustable	
6	American		
7	Fat tuesday		
8	Party		
9	Slow color splash		

6. MiBoxer APP Control

- 1. Long press "SET" three seconds, device go into wifi configuration mode when red indicator blinking.
- 2. Log in MiBoxer APP and click the " + " on the right top corner, then select "Waterproof LED controller(WL5-WP)". Follow the hints to complete the device adding.

Indicating light instruction:

Red light	Red light	Green light	Green light blinking	Yellow light
always-on	blinking	always-on		blinking
Disconnected from network	Smart Link mode	Networking successfully	Received signal	Device malfunction

7. Attention

- 1. Please check whether the input voltage of the constant voltage power supply is in accordance with the controller, and please check the connection of both the cathode and
- 2. Non-professional user cannot dismantle the controller directly, otherwise, it may cause fire and electric shock.
- 3. Please do not use controller around the mental area and high magnetic field, otherwise, it will badly affect the control distance







MiBoxer APP User Instruction

1 APP Downloading

For IOS System: Pls search "MiBoxer" on APP store. (Above IOS9.0)


For Android System: search "MiBoxer" on Google Play (Above Android 5.0) or Scan below QR-code to download APP.



Scan QR Code to Install APF

2 Register MiBoxer Account

Open APP and click Register button; Complete the register and log in.

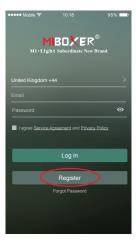

3 Add Device

- 1. Click the right top " + " on the device list.
- Please select the device type you will add, then complete the adding according to the hint of APP.
- 3. Back to device list after adding successfully, then pull down refresh in list to get the device status.



4 Modify device name or delete device

Slide device list to left, click " **Edit** " to modify device name; click " **Delete** " to delete device.

Note: If the device was shared to others, then the device will also be deleted on your friends' device list.



5 Group Control

- Click to switch to Group list, then click the right top from on the Group list to create groups.
- 2. Slide the Group list to left to Edit / Delete groups.

Note: The group just work on APP Controlling, cannot work on Voice control. Please open third party APP for Group Voice control.



6 APP Control

Click the device or group that you want to dim on device list and group list into Dimming Interface.

- S+ Click speed+ under dynamic mode.
- S- Click speed- under dynamic mode.




7 Third Party Voice Control instructions

Search "Mi-Light Smart" on third-party platform APP and set up.

Click left top * = 'icon on the home page;

Then click " • Voice Control " to check detailed instructions.

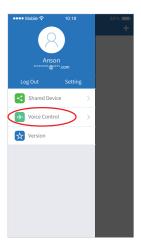

8 Sharing Device

Share the device to friends, Let your friends can control this device.

- Click the left top " == " icon on the home page.
- Click " Shared Device " to My sharing, then click"Add sharing" (Note: the receiving sharing device cannot be shared again).
- 3. Click " (R) jack in to edit sharing, slide to left to delete sharing.

