# superbrightleds.com

# **User Manual**

WPFC-R1 and

**WPFCCT-R1 Series** 

Important: Read all instructions prior to installation.


## Full Cutoff LED Wall Pack

#### Safety and Notes

- Product should be installed and serviced by a certified electrician in accordance with applicable national, state, and local building and electrical codes.
- To reduce the risk of electric shock, ensure that the main power source and circuit breakers are switched off before performing any installation or wiring procedures.
  Avaid looking directly into lown when illuminated
- Avoid looking directly into lamp when illuminated.
- Ensure all mounts are securely attached and will support the weight of the fixture. Failure to properly support fixture may result in damage or injury, for which the manufacturer does not assume responsibility.

### WPFC-R1-50K40-LD

#### Wiring Diagram

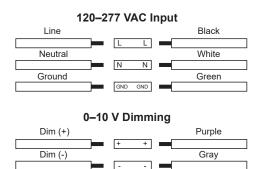

#### Specifications


Model	WPFC-R1 and WPFCCT-R1
Operating Temperature	-22°–113° F (-30°–45° C)
IP Rating	IP65


Check product label for specific electrical

specifications related to installation.

Improper installation will void warranty.

#### **Opening Fixture**

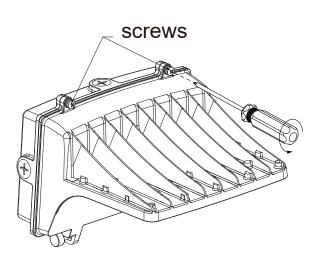

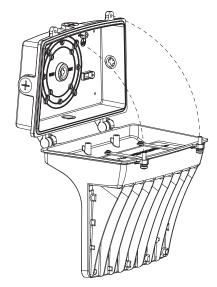







# **User Manual**

WPFC-R1 and

**WPFCCT-R1 Series** 


Important: Read all instructions prior to installation.

# Full Cutoff LED Wall Pack


#### Installation


- 1. Remove screws and swing front housing down.
- 2. Drill holes in rear housing for mounting.
- Note: For junction box wiring, remove rear pipe plug and for conduit mounting remove one of the side plugs.
- 3. Measure and create mounting holes on wall as needed.
- 4. Apply gasket and mount rear housing.
- 5. Select desired CCT using internal switch.
- 6. With supply power off, connect wiring.
- 7. Resecure front housing to rear housing.


#### **Junction Box Installation**

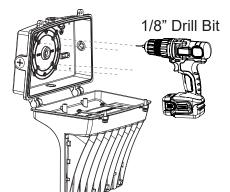

#### Conduit Installation

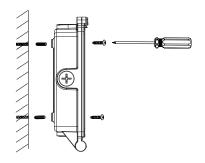

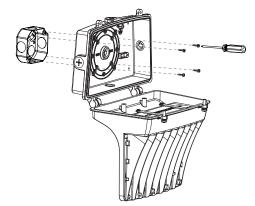

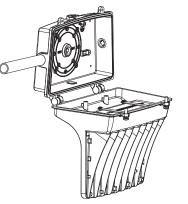

#### **CCT Adjustment**

On equipped models, selectable CCT can be set using the internal switch. Make certain supply power is switched off when performing this procedure.







• 866-590-3533

•