


**Parts needed to mount the STEKO extrusion**

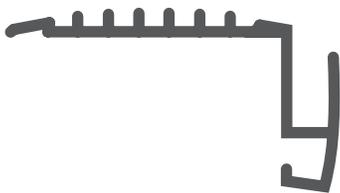

Extrusion (A)



End cap (B)



Silicone string (C)




LED Tape (D)

**Tools needed for mounting:**


- drill
- screwdriver
- glue

**WARNING!** All LED strips should be connected to a 12 V or 24 V power supply.


**1.** Drill a hole in the the extrusion (A) where the power wire will be fed to the LED tape.

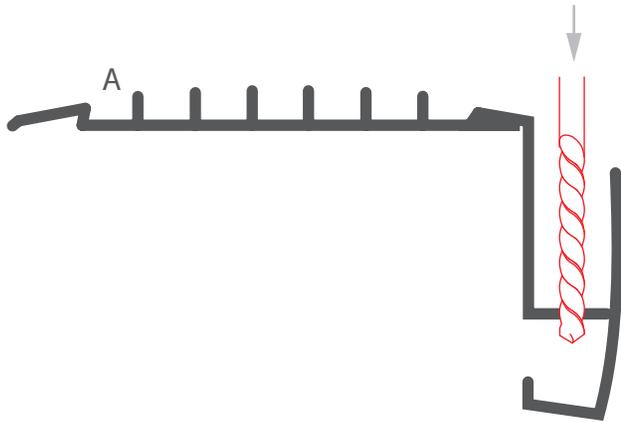


**2.** Mount the LED (D), then run the power wire through the hole drilled earlier.

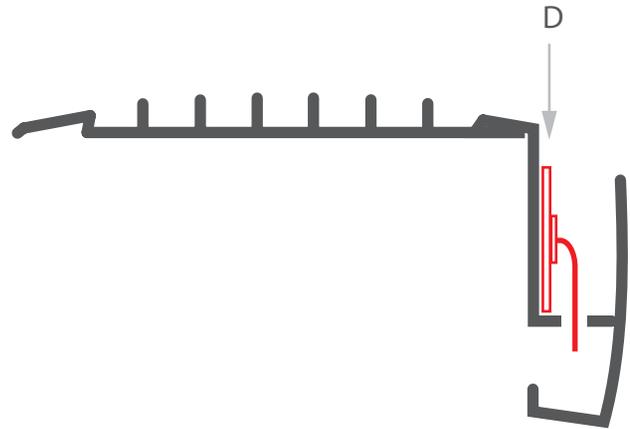

**2.** Fasten the extrusion (A) to the surface with appropriate screws for the substrate.

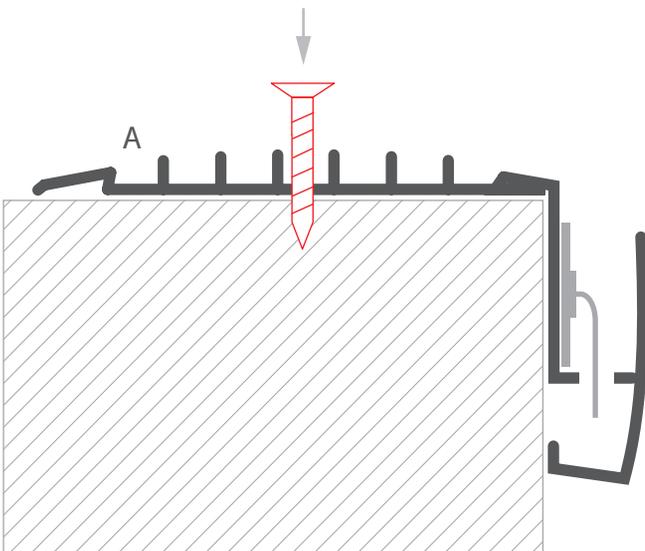

**4.** Insert the silicone string (C) into the extrusion above the LED tape.

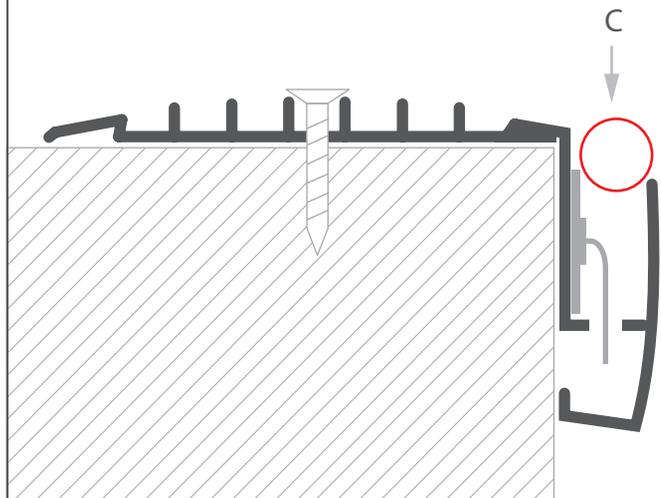

**5.** Glue the end cap (B) to the extrusion.

