**Parts needed to mount the PDS-O extrusion**

Mounting
bracket (A)



Extrusion (B)



LED strip (C)



Cover (D)



End cap (E)


Tools needed for mounting:

- drill
- screwdriver


WARNING! All LED strips should be connected to a 12 V or 24 V power supply.

IMPORTANT: The mounting instructions present the basic form of assembly. More methods and related accessories can be found at www.KlusDesign.com

- 1.** Feed the power cable. Attach the mounting bracket (A) to the surface with screws.

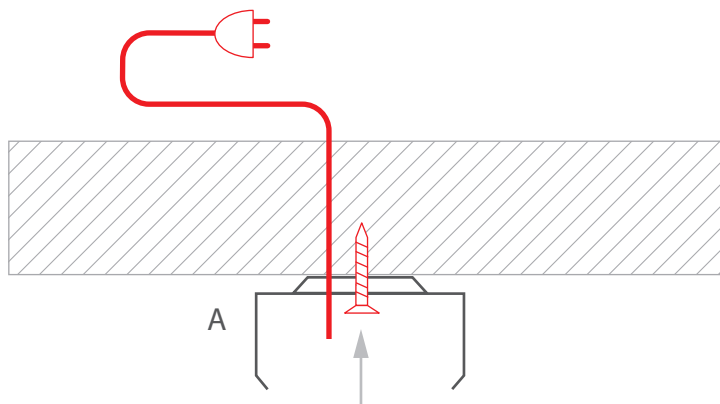

- 2.** Install the LED strip (C) in the extrusion (B), insert the cover (D) and the end caps (E).

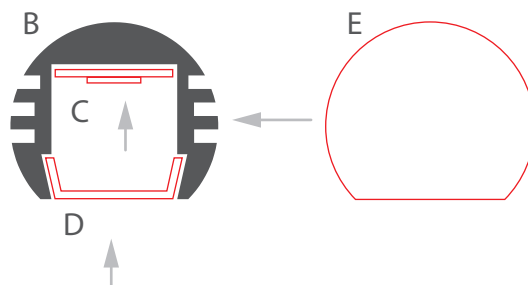

- 3.** Connect power to the LED strip and mount the extrusion (B) in the mounting brackets (A).

