


Constant Voltage DMX512 & RDM Decoder

Model No.: D5-CX

Features

1. Accord with DMX512 standard protocol.
2. Digital Display, Set DMX initial address through button.
3. Support RDM function.
4. 2000 Hz/500 Hz Output PWM frequency is optional.
5. Logarithm/Linear dimming curve is optional.
6. Anti-reverse protection function
7. Short circuit, overcurrent protection, and recover function.
8. Self-testing protection function when power on.

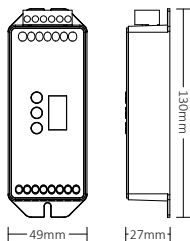

Parameter

Model No.	D5-CX
Output (A/Channel)	4A
Total Output	Max 20A
Input Voltage	DC12~24V
Input Signal	DMX512, RDM
Connection	Common anode
Working Temp.	-20~60°C

Function Settings

1. Digital Display status description

Self-locking: Display locks when there is no operation for 30 seconds.

Unlock: Long press M button 2 seconds to make digital display with high light, quit self-locking state.

Address always ON: DMX signal valid.

Address flickering: DMX signal invalid.

Err: Short circuit/overcurrent protection; self-recover after 10 seconds.

2. DMX initial address setting

Under unlock status, when digital display show 001-512(for example **001**), Short press ▲ button or ▼ button, you can change the DMX initial address; Long press, you can change it quickly.

For Example: Set Initial address to 100

D5-CX
Occupy 5 address 100-104

3. System Parameter Setting Instruction

Under unlock status: Long press **M** button 3 seconds to make digital display show **000** or **000**, then get into system parameter setting. By this time, short press **M** button to switch 4 different parameter setting circularly.

Parameter 1: PWM frequency setting(show **000** or **000**), short press ▲ button or ▼ button to switch.

000 Set to PWM high frequency output, 2000 Hz. (Factory default

000 parameter) Set to PWM low frequency output, 500 Hz.

Parameter 2: Dimming Curve setting(show **000** or **000**), short press ▲ button or ▼ button to switch.

000 Dimming curve is logarithm dimming. (Factory default parameter)

000 Dimming curve is linear dimming.

Parameter 3: Dimming smoothness setting(show **888** or **880**), short press ▲ button or ▼ button to switch.

888 Smooth dimming. (Factory default setting)

880 Standard dimming.

Parameter 4: Digital display showing setting(show **888** or **888**), short press ▲ button or ▼ button to switch.

888 Under self-locking status, digital display always ON (low lighting showing). (Factory default parameter)

888 Under self-locking status, digital display OFF.


Exit system mode: long press M button 1 second to exit. Or it will be self exit if there is no operation over 8 seconds.

4. Restore factory default.


Under unlock status, long press **M** button 10 seconds until digital display show **888**.

Dimming curve diagram


Logarithmic dimming curve

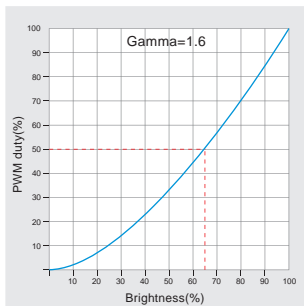

Linear dimming curve

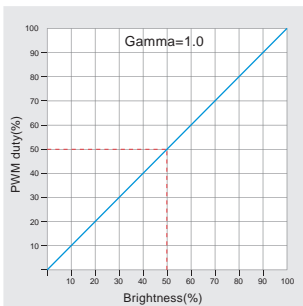

Connection diagram

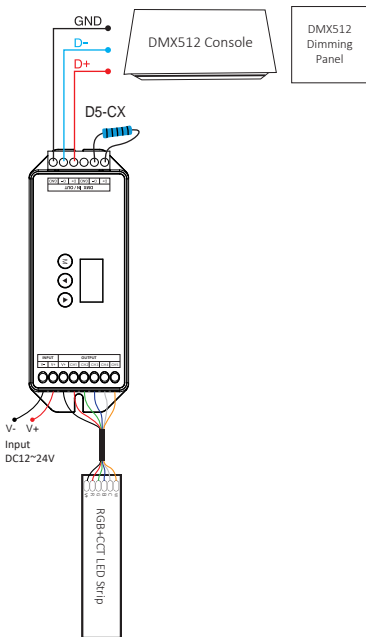

Attention

1. This product should be debugged and installed by professionals.
2. Please check whether the output voltage of the power supply meets the requirements of the product voltage range.
3. The product is not weatherproof, please install it in the weatherproof or waterproof box when installing outdoors.
4. Before switching on the power, please ensure that all wiring is correct, so as not to cause damage to any connected device.



Made in China